




QUANTUM®


Keyless Locking

Quick Reference Guide

GC/GC2 CONTROLLER



INDICATION



Battery Indicator LEDs flash in sequence


TO UNLOCK:

Hold Joystick forward until beep, then pull Joystick back until beep. Unit is now unlocked


TO LOCK:

While powered on, hold On/Off Key until beep, then release. Push Joystick forward until beep, then pull Joystick back until beep. Unit is now locked

VR2 CONTROLLER



INDICATION



Profile LEDs scroll left to right


TO UNLOCK:

Hold Joystick forward until beep, then pull Joystick back until beep. There will be a long beep indicating unit is unlocked.


TO LOCK:

While powered on, hold On/Off Key until beep, then release. Push Joystick forward until beep, then pull Joystick back until beep. Unit is now locked

R-NET CONTROLLER



INDICATION



Profile LEDs scroll left to right


TO UNLOCK:

Hold Joystick forward until beep, then pull Joystick back until beep. There will be a long beep indicating unit is unlocked.


TO LOCK:

While powered on, hold On/Off Key until beep, then release. Push Joystick forward until beep, then pull Joystick back until beep. Unit is now locked

REMOTE PLUS CONTROLLER

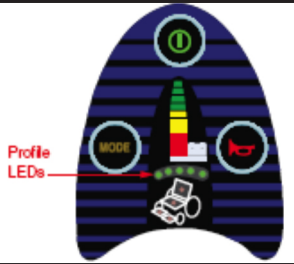


INDICATION

 


Profile LEDs scroll left to right

TO UNLOCK:




Insert and then remove special 3-pin key to unlock or unplug Joystick cable to reset.

TO LOCK:




Insert and then remove special 3-pin key to lock.

VSI CONTROLLER



INDICATION



Profile LEDs scroll left to right

TO UNLOCK:

Push Joystick forward until beep then pull joystick back until beep. Unit is now unlocked.

TO LOCK:

Hold On/Off Key until beep, then release. Push Joystick forward until beep, then pull Joystick back until beep. There will be a long beep indicating unit is locked.

Q-LOGIC CONTROLLER



INDICATION



LCD Display states 'System Lock.'

TO UNLOCK:

Push joystick forward until beep, release Joystick to centre, pull Joystick back until beep. Unit is now unlocked.

TO LOCK:

Push Mode Select Lever forward until unit shuts off. Use an external switch or set a profile to AUX and lock will appear in AUX menu. (Must be programmed for lock)